
IMPORTANT SAFETY RULES

Read, understand, and follow all instructions carefully before installing and using this product.

Rectangular Ultra Frame™ Pool

157-1/2"x78-3/4"x39-3/8" (400cm x 200cm x 100cm) 15' x 9' (457 cm x 274 cm), 18' x 9' (549 cm x 274 cm) 24' x 12' (732 cm x 366 cm), 32' x 16' (975 cm x 488 cm)

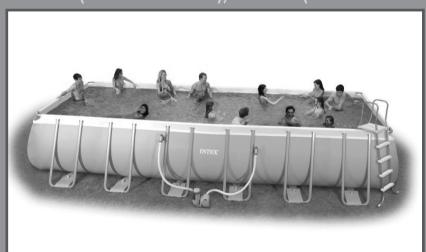

For illustrative purposes only. Accessories may not be provided with pool.

Don't forget to try these other fine Intex products: Pools, Pool Accessories, Inflatable Pools and In-Home Toys, Airbeds and Boats available at fine retailers or visit our website listed below. Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual without notice.

IMPORTANT! DO NOT RETURN PRODUCT TO STORE

UNTEX

To purchase parts and accessories or to obtain non-technical assistance, visit

www.intexcorp.com

For technical assistance and missing parts call us toll-free (for U.S. and Canadian Residents):

1-800-234-6839

Monday through Friday, 8:30am to 5:00pm Pacific Time 119-*PO-R1-1507

TABLE OF CONTENTS

Warnings	3
Parts References	4-7
Setup Instructions	8-12
Pool Maintenance and Chemicals	13-14
Common Pool Problems	13
Pool Draining	14
Storage	14-15
General Aquatic Safety	16
Limited Warranty	17
Pool Safety Sign	18

Introduction:

Thanks for buying an Intex pool. Please read this manual before setting up your pool. This information will help extend the pool life and make the pool safer for your family's enjoyment. View the video included before installation. A team of 2-4 people is recommended for pool set up. Additional people will speed up the installation.

119 PO

IMPORTANT SAFETY RULES

Read, Understand and Follow All Instructions Carefully Before Installing and Using this Product

A WARNING

- · Continuous and competent adult supervision of children and the disabled is required at all times.
- Secure all doors, windows and safety barriers to prevent unauthorized, unintentional or unsupervised pool entry.
- · Install a safety barrier that will eliminate access to the pool for young children and pets.
- · Pool and pool accessories are to be assembled and disassembled by adults only.
- Never dive, jump or slide into an above-ground pool or any shallow body of water.
- Failure to set up pool on flat, level, compact ground or over filling could result in the pool's collapse and the possibility that a person lounging in the pool could be swept out/ejected.
- Do not lean, straddle, or exert pressure on the inflatable ring or top rim as injury or flooding could occur. Do not allow anyone to sit on, climb, or straddle the sides of the pool.
- Remove all toys and flotation devices from, in, and around the pool when it is not in use. Objects in the pool attract young children.
- Keep toys, chairs, tables, or any objects that a child could climb on at least four feet (1.22 meters) away from the pool.
- Keep rescue equipment by the pool and clearly post emergency numbers at the phone closest to the pool. Examples of rescue equipment: coast guard approved ring buoy with attached rope, strong rigid pole not less than twelve feet (12') [3.66m] long.
- · Never swim alone or allow others to swim alone.
- Keep your pool clean and clear. The pool floor must be visible at all times from the outside barrier of the pool.
- If swimming at night use properly installed artificial lighting to illuminate all safety signs, ladders, pool floor and walkways.
- Stay away from the pool when using alcohol or drugs/medication.
- · Keep children away from pool covers to avoid entanglement, drowning, or other serious injury.
- Pool covers must be completely removed before pool use. Children and adults cannot be seen under a pool cover.
- Do not cover the pool while you or anyone else is in the pool.
- · Keep the pool and pool area clean and clear to avoid slips and falls and objects that may cause injury.
- Protect all pool occupants from recreational water illnesses by keeping the pool water sanitized. Don't swallow the pool water. Practice good hygiene.
- All pools are subject to wear and deterioration. Certain types of excessive or accelerated deterioration can lead to an operation failure, and can ultimately cause the loss of large quantities of water from your pool. Therefore, it is very important that you properly maintain your pool on a regular basis.
- This pool is for outdoor use only.
- Empty pool completely when not in use for a longer period and safely store the empty pool in such a way that it does not collect water from rain or any other source. See storage instructions.
- While the swimming pool is in use, you will need to operate the filter pump to ensure that there is at least one complete turnover of water a day. Consult your pump's manual to calculate the necessary operating hours.

POOL BARRIERS AND COVERS ARE NOT SUBSTITUTES FOR CONTINUOUS AND COMPETENT ADULT SUPERVISION. POOL DOES NOT COME WITH A LIFEGUARD. ADULTS ARE THEREFORE REQUIRED TO ACT AS LIFEGUARDS OR WATER WATCHERS AND PROTECT THE LIVES OF ALL POOL USERS, ESPECIALLY CHILDREN, IN AND AROUND THE POOL.

FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR DEATH.

Advisory:


Pool owners may need to comply with local or state laws relating to childproof fencing, safety barriers, lighting, and other safety requirements. Customers should contact their local building code enforcement office for further details.

PARTS REFERENCE


Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

For Pools with Dual Suction Outlets Configuration:

In order to comply with the requirement of the Virginia Grahame Baker Act (for USA and Canada), your pool is designed with dual suction outlets and one inlet fittings. Overview of the dual suction outlets configuration is as follow:

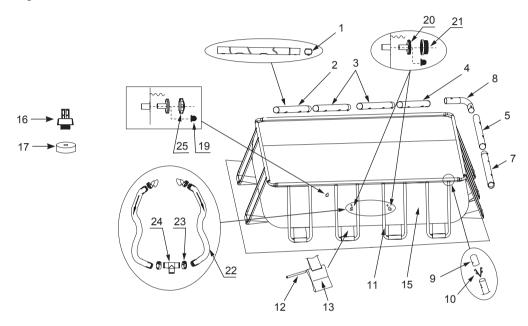

157-1/2" x 78-3/4" (400cm x 200cm)

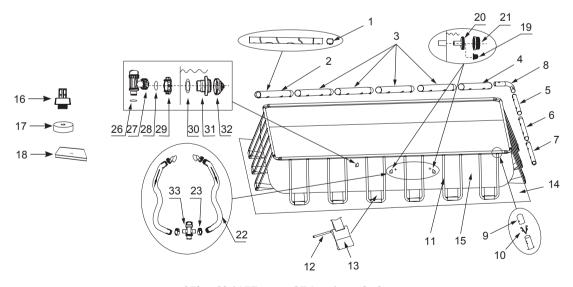

15' x 9' (457cm x 274cm) and above

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

119 PO

PARTS REFERENCE (continued)

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

SINGLE BUTTON SPRING	DEE		POOL SIZE & QUANTITIES				
HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED) 2	REF. NO.	DESCRIPTION					
A HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED)	1	SINGLE BUTTON SPRING	8	8	8	14	20
HORIZONTAL BEAM (C) 2 2 2 2 2 2 2 2 2	2	HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED)	2	2	2	2	2
5 HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED) 2 2 2 2 2 2 2 2 2 2 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 2 2 2 <	3	HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED)	4	4	4	8	12
6 HORIZONTAL BEAM (F) (SINGLE BUTTON SPRING INCLUDED) 7 HORIZONTAL BEAM (F) 8 CORNER JOINT 4 4 4 4 4 4 4 4 4 9 9 U-SUPPORT END CAP 10 DOUBLE BUTTON SPRING CLIP 24 24 24 36 48 10 DOUBLE BUTTON SPRING CLIP 24 24 24 24 36 48 11 U-SHAPED SIDE SUPPORT (IU-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 12 12 12 18 24 12 CONNECTING ROD 12 12 12 12 18 24 13 RESTRAINER STRAP 11 12 12 12 18 24 14 GROUND CLOTH 1 1 1 1 1 15 POOL LINER (BRAIN VALVE CAP INCLUDED) 16 DRAIN CONNECTOR 1 1 1 1 1 1 17 DRAIN VALVE CAP 19 STRAINER HOLE PLUG 20 STRAINER CONNECTOR 3 2 2 2 2 21 STRAINER GRID 21 STRAINER GRID 22 2 2 2 2 22 2 2 23 HOSE 24 HOSE 25 HOSE 26 HOSE O-RING 27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 1 28 STEP WASHER 1 1 1 1 1 1 30 FLAT STRAINER RUBBER WASHER 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 3 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 4 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 1 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 5 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	4	HORIZONTAL BEAM (C)	2	2	2	2	2
The Rizontal Beam (F)	5	HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED)	2	2	2	2	2
8 CORNER JOINT	6	HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED)				2	4
9 U-SUPPORT END CAP 24 24 24 36 48 10 DOUBLE BUTTON SPRING CLIP 24 24 24 24 36 48 11 U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 12 12 12 18 24 12 CONNECTING ROD 12 12 12 12 18 24 13 RESTRAINER STRAP 12 12 12 18 24 14 GROUND CLOTH 1 1 1 1 1 15 POOL LINER (DRAIN VALVE CAP INCLUDED) 1 1 1 1 1 1 16 DRAIN CONNECTOR 1 1 1 1 1 1 17 DRAIN VALVE CAP 2 2 2 2 2 2 18 POOL COVER 1 1 1 1 1 1 19 STRAINER HOLE PLUG 3 2 2 2 2 20 STRAINER CONNECTOR 3 2 2 2 2 21 STRAINER GRID 2 2 2 2 2 22 1 2 23 HOSE CLAMP 4 HOSE T-JOINT 1 1 1 1 1 27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 28 STEP WASHER 1 1 1 1 1 30 FLAT STRAINER RUBBER WASHER 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1	7	HORIZONTAL BEAM (F)	2	2	2	2	2
DOUBLE BUTTON SPRING CLIP 24	8	CORNER JOINT	4	4	4	4	4
11 USHAPED SIDE SUPPORT (USUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 12 12 12 12 18 24 12 CONNECTING ROD 12 12 12 12 18 24 13 RESTRAINER STRAP 12 12 12 12 18 24 14 GROUND CLOTH 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 </td <td>9</td> <td>U-SUPPORT END CAP</td> <td>24</td> <td>24</td> <td>24</td> <td>36</td> <td>48</td>	9	U-SUPPORT END CAP	24	24	24	36	48
12 12 12 18 24 13 RESTRAINER STRAP 12 12 12 18 24 14 GROUND CLOTH	10	DOUBLE BUTTON SPRING CLIP	24	24	24	36	48
13 RESTRAINER STRAP 12 12 12 12 18 24 14 GROUND CLOTH 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	11	U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED)	12	12	12	18	24
14 GROUND CLOTH 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <	12	CONNECTING ROD	12	12	12	18	24
15 POOL LINER (DRAIN VALVE CAP INCLUDED) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	13	RESTRAINER STRAP	12	12	12	18	24
16 DRAIN CONNECTOR 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	14	GROUND CLOTH		1	1	1	1
17 DRAIN VALVE CAP 2 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	15	POOL LINER (DRAIN VALVE CAP INCLUDED)	1	1	1	1	1
18 POOL COVER 1 1 1 1 19 STRAINER HOLE PLUG 3 2 2 2 2 20 STRAINER CONNECTOR 3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	16	DRAIN CONNECTOR	1	1	1	1	1
19 STRAINER HOLE PLUG 3 2 2 2 20 STRAINER CONNECTOR 3 2 2 2 2 21 STRAINER GRID 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	17	DRAIN VALVE CAP	2	2	2	2	2
20 STRAINER CONNECTOR 3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	18	POOL COVER	1 1 1		1		
21 STRAINER GRID 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	19	STRAINER HOLE PLUG	3 2 2 2		2		
22 HOSE 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 <td>20</td> <td>STRAINER CONNECTOR</td> <td>3</td> <td>2</td> <td>2</td> <td>2</td> <td>2</td>	20	STRAINER CONNECTOR	3	2	2	2	2
23 HOSE CLAMP 8 4 4 4 4 24 HOSE T-JOINT 1 1 .	21	STRAINER GRID	2	2	2	2	2
24 HOSE T-JOINT 1 25 POOL INLET NOZZLE 1 26 HOSE O-RING 1 1 1 1 27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <t< td=""><td>22</td><td>HOSE</td><td>2</td><td>2</td><td>2</td><td>2</td><td>2</td></t<>	22	HOSE	2	2	2	2	2
25 POOL INLET NOZZLE 1 26 HOSE O-RING 1 1 1 1 27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 28 STEP WASHER 1 1 1 1 1 1 29 STRAINER NUT 1 1 1 1 1 1 30 FLAT STRAINER RUBBER WASHER 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1 1 1	23	HOSE CLAMP	8	4	4	4	4
26 HOSE O-RING 1 1 1 1 1 27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <	24	HOSE T-JOINT	1				
27 PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED) 1 1 1 1 1 28 STEP WASHER 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 <	25	POOL INLET NOZZLE	1				
28 STEP WASHER 1 1 1 1 29 STRAINER NUT 1 1 1 1 1 30 FLAT STRAINER RUBBER WASHER 1 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 1 32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1 1 1	26	HOSE O-RING		1	1	1	1
29 STRAINER NUT 1 1 1 1 1 30 FLAT STRAINER RUBBER WASHER 1 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1 1	27	PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED)		1	1	1	1
30 FLAT STRAINER RUBBER WASHER 1 1 1 1 31 THREADED STRAINER CONNECTOR 1 1 1 1 1 32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1 1	28	STEP WASHER		1	1	1	1
31 THREADED STRAINER CONNECTOR 1 1 1 1 32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1 1	29	STRAINER NUT		1	1	1	1
32 ADJUSTABLE POOL INLET NOZZLE 1 1 1 1	30	FLAT STRAINER RUBBER WASHER		1	1	1	1
	31	THREADED STRAINER CONNECTOR		1	1	1	1
33 SPLIT HOSE PLUNGER VALVE 1 1 1 1	32	ADJUSTABLE POOL INLET NOZZLE		1	1	1	1
	33	SPLIT HOSE PLUNGER VALVE		1	1	1	1

119 PO

PARTS REFERENCE (continued)


Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

		157-1/2"x78-3/4"x39-3/8"	15' x 9' x 48" (457cm	18' x 9' x 52" (549cm	24' x 12' x 52" (732cm	32' x 16' x 52" (975cm
REF. NO.	DESCRIPTION	(400cm x 200cm x 100cm)	x 274cm x 122cm)	x 274cm x 132cm)	x 366cm x 132cm)	x 488cm x 132cm)
NO.			SP	ARE PART	NO.	'
1	SINGLE BUTTON SPRING	11664	10381	10381	10381	10381
2	HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED)	11665	11524	10919	10920	10921
3	HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED)	11666	11525	10922	10923	10924
4	HORIZONTAL BEAM (C)	11667	11526	10925	10926	10927
5	HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED)	11668	10928	10928	10929	10928
6	HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED)				10930	10931
7	HORIZONTAL BEAM (F)	11669	10932	10932	10933	10932
8	CORNER JOINT	11670	10934	10934	10934	10934
9	U-SUPPORT END CAP	11663	10935	10935	10935	10935
10	DOUBLE BUTTON SPRING CLIP	10382	10936	10936	10936	10936
11	U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED)	11671	11523	10937	10937	10937
12	CONNECTING ROD	10383	10383	10383	10383	10383
13	RESTRAINER STRAP	11981	10938	10938	10938	10938
14	GROUND CLOTH		11521	10759	18941	10760
15	POOL LINER (DRAIN VALVE CAP INCLUDED)	11982EH	11520EH	10939EH	10940EH	10941EH
16	DRAIN CONNECTOR	10184	10184	10184	10184	10184
17	DRAIN VALVE CAP	11044	11044	11044	11044	11044
18	POOL COVER		11522	10756	18936	10757
19	STRAINER HOLE PLUG	10127	10127	10127	10127	10127
20	STRAINER CONNECTOR	11070	11070	11070	11070	11070
21	STRAINER GRID	11072	11072	11072	11072	11072
22	HOSE	11873	11873	11873	11873	11873
23	HOSE CLAMP	11489	10122	10122	10122	10122
24	HOSE T-JOINT	11871				
25	POOL INLET NOZZLE	11071				
26	HOSE O-RING		10262	10262	10262	10262
27	PLUNGER VALVE (HOSE O-RING & STEP WASHER INCLUDED)		10747	10747	10747	10747
28	STEP WASHER		10745	10745	10745	10745
29	STRAINER NUT		10256	10256	10256	10256
30	FLAT STRAINER RUBBER WASHER		10255	10255	10255	10255
31	THREADED STRAINER CONNECTOR		11235	11235	11235	11235
32	ADJUSTABLE POOL INLET NOZZLE		11074	11074	11074	11074
33	SPLIT HOSE PLUNGER VALVE		11872	11872	11872	11872

119 PO

PARTS REFERENCE (continued)

Before assembling your product, please take a few minutes to check the contents and become familiar with all the parts.

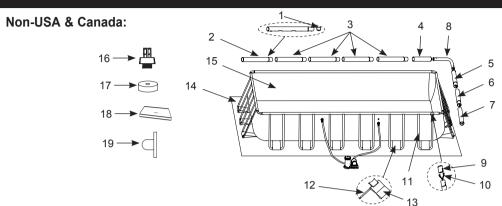

NOTE: Drawings for illustration purpose only. Actual product may vary. Not to scale.

REF.	POOL SIZE & QUANTITIE			NTITIES		
NO.	DESCRIPTION 15		15' x 9'	18' x 9'	24' x 12'	32' x 16'
		` '	,	,		(975cm x 488cm)
1	SINGLE BUTTON SPRING	8	8	8	14	20
2	HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED)	2	2	2	2	2
3	HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED)	4	4	4	8	12
4	HORIZONTAL BEAM (C)	2	2	2	2	2
5	HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED)	2	2	2	2	2
6	HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED)				2	4
7	HORIZONTAL BEAM (F)	2	2	2	2	2
8	CORNER JOINT	4	4	4	4	4
9	U-SUPPORT END CAP	24	24	24	36	48
10	DOUBLE BUTTON SPRING CLIP	24	24	24	36	48
11	U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED)	12	12	12	18	24
12	CONNECTING ROD	12	12	12	18	24
13	RESTRAINER STRAP	12	12	12	18	24
14	GROUND CLOTH		1	1	1	1
15	POOL LINER (DRAIN VALVE CAP INCLUDED)	1	1	1	1	1
16	DRAIN CONNECTOR	1	1	1	1	1
17	DRAIN VALVE CAP	2	2	2	2	2
18	POOL COVER		1	1	1	1
19	STRAINER HOLE PLUG	3				

NO. DESCRIPTION X24em X12cm X24em X12cm X4eem X13cm X4eem X1	REF.						32' x 16' x 52" (975cm
1 SINGLE BUTTON SPRING 11664 10381 10381 10381 10381 10381 2 HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED) 11665 11524 10919 10920 10922 3 HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED) 11666 11525 10922 10923 10924 4 HORIZONTAL BEAM (C) 11667 11526 10925 10926 10925 10926 10925 10926 10925 10926 10925 10926 10927 10928 10928 10929 10928 10929 10928 10928 10929 10928 10929 10928 10929 10928 10929 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10930 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 10940 109		DESCRIPTION		x 274cm x 122cm)	x 274cm x 132cm)	x 366cm x 132cm)	x 488cm x 132cm)
2 HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED) 11665 11524 10919 10920 10922 3 HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED) 11666 11525 10922 10923 10924 4 HORIZONTAL BEAM (C) 11667 11526 10925 10926 10927 5 HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED) 11668 10928 10928 10929 10926 6 HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED) 11669 10932 10932 10930 10937 7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10933 8 CORNER JOINT 11667 10934 10934 10934 10934 9 U-SUPPORT END CAP 11663 10935 10935 10935 10935 10935 10 DOUBLE BUTTON SPRING CLIP 10382 10936 10936 10936 10936 10936 11 U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 11671 11523 10937 10937 10937 12 CONNECTIN	NO.		SPARE PART NO.				
3 HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED) 11666 11525 10922 10923 10924 4 HORIZONTAL BEAM (C) 11667 11526 10925 10926 10927 5 HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED) 11668 10928 10928 10929 10926 6 HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED) 10930 10930 10937 7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10933 8 CORNER JOINT 11667 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10937 10937 10937 10937 10937 10937 10937 10937 10937 10938 10383 10383 10383 10383 10383 10383 10383 </td <td>1</td> <td>SINGLE BUTTON SPRING</td> <td>11664</td> <td>10381</td> <td>10381</td> <td>10381</td> <td>10381</td>	1	SINGLE BUTTON SPRING	11664	10381	10381	10381	10381
4 HORIZONTAL BEAM (C) 11667 11526 10925 10926 10927 5 HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED) 11668 10928 10928 10929 10926 6 HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED) 10930 10932 10933 10933 7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10933 8 CORNER JOINT 11667 10934 10934 10934 10934 10934 10934 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935	2	HORIZONTAL BEAM (A) (SINGLE BUTTON SPRING INCLUDED)	11665	11524	10919	10920	10921
5 HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED) 11668 10928 10928 10929 10926 6 HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED) 10930 10931 10932 10932 10933 10933 10932 7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10933 10932 8 CORNER JOINT 11667 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10936 10936 10936 10936 10936 10936 10936 10937 10937 10937 10937 10937 10937 10937 10937 10937 10938<	3	HORIZONTAL BEAM (B) (SINGLE BUTTON SPRING INCLUDED)	11666	11525	10922	10923	10924
6 HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED) 10930 10932 7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10932 8 CORNER JOINT 11670 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10938 10938 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10938 10938 10938 10938 10938	4	HORIZONTAL BEAM (C)	11667	11526	10925	10926	10927
7 HORIZONTAL BEAM (F) 11669 10932 10932 10933 10932 8 CORNER JOINT 11670 10934 10934 10934 10934 9 U-SUPPORT END CAP 11663 10935 10935 10935 10935 10 DOUBLE BUTTON SPRING CLIP 10382 10936 10936 10936 10936 11 U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 11671 11523 10937 10937 10937 12 CONNECTING ROD 10383 10383 10383 10383 10383 10383 10383 13 RESTRAINER STRAP 11981 10938 10938 10938 10938 10938 14 GROUND CLOTH 11521 10759 18941 10760 15 POOL LINER (DRAIN VALVE CAP INCLUDED) 11982 11520 10939 10940 10947 16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	5	HORIZONTAL BEAM (D) (SINGLE BUTTON SPRING INCLUDED)	11668	10928	10928	10929	10928
8 CORNER JOINT 11670 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10934 10935 10935 10935 10935 10935 10935 10935 10935 10935 10935 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10937 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10936 10940	6	HORIZONTAL BEAM (E) (SINGLE BUTTON SPRING INCLUDED)				10930	10931
9 U-SUPPORT END CAP 11663 10935 10935 10935 10935 10 DOUBLE BUTTON SPRING CLIP 10382 10936 10936 10936 10936 10936 11 U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 11671 11523 10937 10937 10937 12 CONNECTING ROD 10383 10383 10383 10383 10383 10383 13 RESTRAINER STRAP 11981 10938 10938 10938 10938 14 GROUND CLOTH 11521 10759 18941 10760 15 POOL LINER (DRAIN VALVE CAP INCLUDED) 11982 11520 10939 10940 10947 16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	7	HORIZONTAL BEAM (F)	11669	10932	10932	10933	10932
10 DOUBLE BUTTON SPRING CLIP 10382 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10936 10937 10937 10937 10937 10937 10937 10937 10937 10937 10938 10938 10938 10383 10383 10383 10383 10383 10383 10383 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10949 10949	8	CORNER JOINT	11670	10934	10934	10934	10934
11 U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED) 11671 11523 10937 10937 10937 12 CONNECTING ROD 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10949 10940 10560 11520 10939 10940 10947 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 <td>9</td> <td>U-SUPPORT END CAP</td> <td>11663</td> <td>10935</td> <td>10935</td> <td>10935</td> <td>10935</td>	9	U-SUPPORT END CAP	11663	10935	10935	10935	10935
12 CONNECTING ROD 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10383 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10938 10940 10760 11521 10759 18941 10760 10940 10940 10940 10940 10940 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184 10184	10	DOUBLE BUTTON SPRING CLIP	10382	10936	10936	10936	10936
13 RESTRAINER STRAP 11981 10938 10938 10938 10938 14 GROUND CLOTH 11521 10759 18941 10760 15 POOL LINER (DRAIN VALVE CAP INCLUDED) 11982 11520 10939 10940 10940 16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	11	U-SHAPED SIDE SUPPORT (U-SUPPORT END CAP & DOUBLE BUTTON SPRING CLIP INCLUDED)	11671	11523	10937	10937	10937
14 GROUND CLOTH 11521 10759 18941 10760 15 POOL LINER (DRAIN VALVE CAP INCLUDED) 11982 11520 10939 10940 1094° 16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	12	CONNECTING ROD	10383	10383	10383	10383	10383
15 POOL LINER (DRAIN VALVE CAP INCLUDED) 11982 11520 10939 10940 10947 16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	13	RESTRAINER STRAP	11981	10938	10938	10938	10938
16 DRAIN CONNECTOR 10184 10184 10184 10184 10184 10184	14	GROUND CLOTH		11521	10759	18941	10760
	15	POOL LINER (DRAIN VALVE CAP INCLUDED)	11982	11520	10939	10940	10941
17 DDAIN VALVE CAR 11044 11044 11044 11044 11044 11044	16	DRAIN CONNECTOR	10184	10184	10184	10184	10184
17 BRAIN VALVE CAP 11044 11044 11044 11044 11044	17	DRAIN VALVE CAP	11044	11044	11044	11044	11044
18 POOL COVER 11522 10756 18936 10757	18	POOL COVER		11522	10756	18936	10757
19 STRAINER HOLE PLUG 10127	19	STRAINER HOLE PLUG	10127				

POOL SETUP

IMPORTANT SITE SELECTION AND GROUND PREPARATION INFORMATION

A WARNING

- The pool location must allow you to secure all doors, windows, and safety barriers to prevent unauthorized, unintentional or unsupervised pool entry.
- · Install a safety barrier that will eliminate access to the pool for young children and pets.
- Failure to set up the pool on flat, level, compact ground and to assemble and fill with water in accordance with the following instructions could result in the pool's collapse or the possibility that a person lounging in the pool could be swept out/ejected, resulting in serious injury or property damage.
- Risk of electric shock: connect the filter pump only to a grounding type receptacle protected by a ground-fault circuit interrupter (GFCI). To reduce the risk of an electrical shock, do not use extension cords, timers, plug adapters or converter plugs to connect the pump to an electrical supply. Always provide a properly located outlet. Locate the cord where it cannot be damaged by lawn mowers, hedge trimmers, and other equipment. See the filter pump manual for additional warnings and instructions.
- · Risk of serious injury: do not attempt to assemble pool in high wind conditions.

Select an outdoor location for the pool with the following requirements in mind:


- 1. The area where the pool is to be set up must be **absolutely flat and level**. Do not set up the pool on a slope or inclined surface.
- 2. The ground surface must be compacted and firm enough to withstand the pressure and weight of a fully set up pool. **Do Not** set up the pool on mud, sand, soft or loose soil conditions.
- **3. Do Not** set up the pool on a deck, balcony or platform.
- **4.** The pool requires at least 5 6 feet (1.5 2.0 m) of space all around pool from objects that a child could climb on to gain access to the pool.
- **5.** The chlorinated poolwater could damage the surrounding vegetation.
- **6.** If the ground is not concrete (i.e., if it is asphalt, lawn or earth) you must place a piece of pressure-treated wood, size 15" x 15" x 1.2" (38 x 38 x 3cm), under each U-shaped support and flush with the ground. Alternatively you may use steel pads or reinforced tiles. Consult your local pool supply retailer for advice on support pads.
- 7. Above ground storable pools shall be located at a minimum distance of 6 ft (1.83 meters) from any receptacle, and that all 125-volt 15- and 20-ampere receptacles located within 20 ft (6.0 meters) of the pool shall be protected by a ground fault circuit interrupter (GFCI), where distances are by measuring the shortest path the supply cord of an appliance connected to the receptacle would follow without piercing a floor, wall, ceiling, doorway with hinged or sliding door, window opening, or other effective permanent barrier.
- **8.** Eliminate all aggressive grasses first. Certain types of grass such as St. Augustine and Bermuda, may grow through the liner. Grass growing through the liner it is not a manufacture defect and is not covered under warranty.

POOL SETUP (continued)

You may have purchased this pool with the Intex Krystal Clear™ filter pump. The pump has its own separate set of installation instructions. First assemble your pool unit and then set up the filter pump.

Estimated assembly time 60~90 minutes. (Note the assembly time is only approximate and individual assembly experience may vary.)

- Find a flat, level location that is free and clear of stones, branches or other sharp objects that may puncture the pool liner or cause injury.
- Open the carton containing the liner, joints, legs, etc., very carefully as this carton can be used to store the pool during the winter months or when not in use.
- Remove the ground cloth (14) from carton. Spread it out completely with its edges being at least 5 6' (1.5 2.0 m) from any obstacle such as walls, fences, trees, etc. Remove the liner (15) from carton and spread it out over the ground cloth with the drain valve towards the draining area. Place the drain valve away from the house. Open it up to warm it in the sun. This warming will make installation easier. Make sure the liner is centered atop the ground cloth. Be sure to face

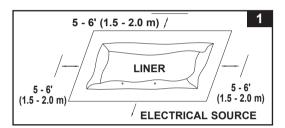



the end with the 2 hose connectors towards the electrical power source.

IMPORTANT: Do not drag the liner across the ground as this can cause liner damage and pool leakage (see drawing 1).

- During the set-up of this pool liner, point the hose connections or openings in the direction of the electric power source. The outer edge of the assembled pool is to be within reach of the electrical connection for the optional filter pump.
- 2. Remove all the parts from the carton(s) and place them on the ground in the location where they are to be assembled. Check the parts listing and be sure all the pieces to be assembled are accounted for (see drawings 2.1, 2.2 & 2.3).

IMPORTANT: Do not start assembly if any pieces are missing. For replacement pieces call the Consumer Service telephone number in your area. After all pieces are accounted for move the pieces away from the liner for of installation.

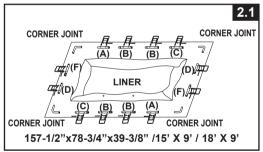

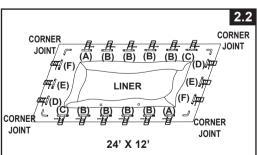


(B)

(C)

English

3

POOL SETUP (continued)

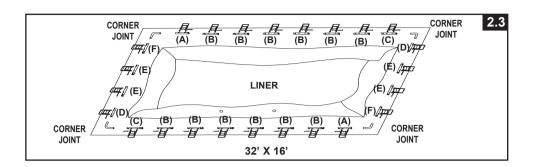

3. Be sure the liner is opened and spread out to its fullest extent on top of the ground cloth. Starting with one side, slide the "A" beams first into the sleeve openings located in each corner. Continue with "B" beam snapping into the "A" beam, and another "C" beam snapping into the "B" beam (see drawing 3).


sleeve holes.

(see drawing 3).
Keep the metal beam holes aligned with the white liner

Continue inserting all "A-B-C & D-E-F" beams into the sleeve openings. Start the "D-E-F" combination for pool's short sides by inserting the "D" beam first into the appairer.


by inserting the "D" beam first into the opening.

The combinations for beams are different for different sizes of pools, see the chart below for detail. (Be

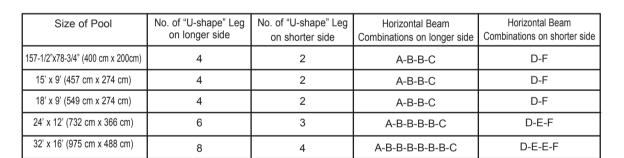

sure all 4 sides end up with the metal beam holes aligned with the white liner sleeve holes.)


4. Slide the restrainer strap (13) onto the large U-shaped side support (11). Repeat for all restrainer straps and U-supports. IMPORTANT: The liner is to remain flat on the ground during the next step #5. This is why 5 - 6' of clearance space around the pool is necessary (see drawing 4).

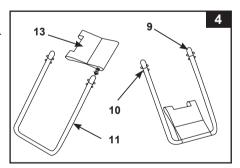

POOL SETUP (continued)


5. The tops of the U-shaped side supports have a double button spring loaded clip (10) that is factory pre-installed. Insert the side supports into the "A-B-C & D-E-F" beam holes by squeezing the bottom button inward with your fingers.

Squeezing this bottom button will allow the support to enter the beam. Once the U-support is inside the beam release the finger pressure allowing the support to "SNAP" into place. Repeat this procedure for all U-shaped side supports (see drawing 5).

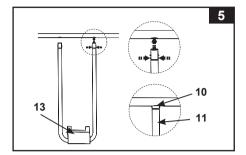


6. With one person standing inside the pool, raise one corner; insert the connecting rod **(12)** into the overlapping openings, to connect the liner straps to the restrainer straps. Repeat the operation in the other corners and then on the sides (see drawings 6.1 & 6.2).




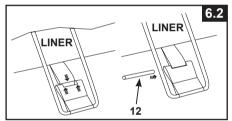

7. Pull the bottoms of the side supports out away from the liner to make the straps taut. Repeat for all locations (see drawing 7).

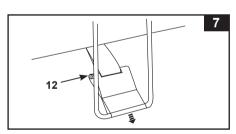


8. If the ground is not concrete (asphalt, lawn or earth) you must place a piece of pressure-treated wood, size 15" x 15" x 1.2", under each leg and flush with the ground. The U-shaped side supports must be placed in the center of the pressure-treated wood and with the wood grain perpendicular to the support leg (see drawing 8).

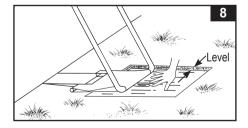

POOL SETUP (continued)

9. Position the long wall top rails so they are leaning over the short wall top rails. Installe the corner joints **(8)** at the 4 corners (see drawing 9).

IMPORTANT: The four corner joints are designed to be moveable relative to the horizontal beams and not fixed to the horizontal beams. This allows the pool side walls to move inward or outward when the pool is in use.

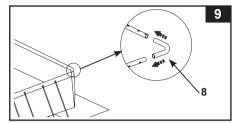


- 10. Assemble the ladder. The ladder has separate assembly instructions in the ladder box.
- 11. Place the assembled ladder over one of the sides with one of the liner installation team members entering the pool to smooth out all bottom liner wrinkles. While inside the pool this team member should check the 2 drain valves (in corners) to be sure the inside drain plug is inserted into the valve. This team member should push each inside corner in an outward direction.
- **12.** Before filling the pool with water, ensure that the drain plug inside the pool is closed and that the drain cap on the outside is screwed on tightly. Fill the pool with no more than 1 inch (2.5 cm) of water. Check to see whether the water is level.

IMPORTANT: If the water in the pool flows to one side, the pool is not completely level. Setting up the pool on unleveled ground will cause the pool to tilt resulting in the sidewall material to bulge. If the pool is not completely level, you must drain the pool, level the area and re-fill the pool.

Smooth out the remaining wrinkles (from inside pool) by pushing out where the pool floor and pool sides meet. Or (from outside pool) reach under the side of the pool, grasp the pool floor and pull it out. If the ground cloth is causing the wrinkles, have 2 people pull from either side to remove all wrinkles.

13. Fill the pool with water up to just below the sleeve line. (see drawing 10).

NOTE: The pool side walls and frame structure will lean inward after having been filled with water to the recommended level. Do not be concerned by the inward leaning of the side walls, this is to accommodate the water movement and pressure when the pool is in use.

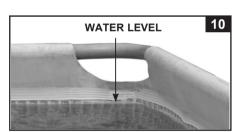

14. Posting aquatic safety signs

Select a highly visible area near the pool to post the Danger No Diving or Jumping sign included later in this manual.

IMPORTANT

Before allowing anyone to use the pool, hold a family meeting. Establish a set of rules that include, at a minimum, the important safety rules and general aquatic safety information in this manual. Review these rules on a regular basis and with all users of the pool, including guests.

POOL MAINTENANCE & CHEMICALS

WARNING

REMEMBER TO

- Protect all pool occupants from possible water-related illnesses by keeping the pool water clean and sanitized. Do not swallow the pool water. Always practice good hygiene.
- Keep your pool clean and clear. The pool floor must be visible at all times from the outside barrier of the pool.
- Keep children away from pool covers to avoid entanglement, drowning, or other serious injury.

Water maintenance

The maintenance of a proper water balance through appropriate use of sanitizers is the single most important factor in maximizing the life and appearance of the liner as well as ensuring clean, healthy and safe water. Proper technique is important for water testing and treating the pool water. See your pool professional for chemical, test kits and testing procedures. Be sure to read and follow the written instructions from the chemical manufacturer.

- 1. Never let chlorine come into contact with the liner if it is not completely dissolved. Dissolve granular or tablet chlorine first in a bucket of water, then add it to the pool water. Likewise with liquid chlorine; mix it immediately and thoroughly with the pool water.
- 2. Never mix chemicals together. Add the chemicals to the pool water separately. Thoroughly dissolve each chemical before adding another one to the water.
- 3. An Intex pool skimmer and an Intex pool vacuum are available to assist in maintaining clean pool water. See your pool dealer for these pool accessories.
- 4. Do not use a pressure washer to clean the pool.

TROUBLESHOOTING

PROBLEM	DESCRIPTION	CAUSE	SOLUTION
ALGAE	Greenish water. Green or black spots on pool liner. Pool liner is slippery and/or has a bad odor.	Chlorine and pH level need adjustment.	Super chlorinate with shock treatment. Correct pH to your pool store's recommended level. Vacuum pool bottom. Maintain proper chlorine level.
COLORED WATER	Water turns blue, brown, or black when first treated with chlorine.	Copper, iron or manganese in water being oxidized by the added chlorine.	 Adjust pH to recommended level. Run filter until water is clear. Replace cartridge frequently.
FLOATING MATTER IN WATER	Water is cloudy or milky.	The results of the r	Correct the pH level. Check with your pool dealer for advice. Check for proper chlorine level. Clean or replace your filter cartridge.
CHRONIC LOW WATER LEVEL	Level is lower than on previous day.	Rip or hole in pool liner or hoses.	Repair with patch kit. Finger tighten all caps. Replace the hoses.
SEDIMENT ON POOL BOTTOM	Dirt or sand on pool floor.	Heavy use, getting in and out of pool.	Use Intex pool vacuum to clean bottom of pool.
SURFACE DEBRIS	Leaves, insects etc.	Pool too close to trees.	Use Intex pool skimmer.

POOL MAINTENANCE & DRAINAGE

A CAUTION

ALWAYS FOLLOW THE CHEMICAL MANUFACTURER'S DIRECTIONS. AND THE HEALTH AND HAZARD WARNINGS.


Do not add chemicals if the pool is occupied. This can cause skin or eye irritation. Concentrated chlorine solutions can damage the pool liner. In no event is Intex Recreation Corp., Intex Development Co. Ltd., their related companies, authorized agents and service centers, retailers or employees liable to the buyer or any other party for costs associated with the loss of pool water, chemicals or water damage. Keep spare filter cartridges on hand. Replace cartridges every two weeks. We recommend the use of a Krystal Clear™ Intex Filter Pump with all of our above-ground-pools. To purchase an Intex Filter Pump or other accessories see your local retailer, visit our website or call the Intex Consumer Services Department listed in the separate "Authorized Service Centers" sheet and have your Visa or Mastercard ready.


EXCESSIVE RAIN: To avoid damage to the pool and over filling, immediately drain rain water that causes the water level to be higher than the maximum.


How to Drain Your Pool and Long Term Storage


NOTE: This pool has drain valves installed in 2 corners. Connect the garden hose to the corner valve that directs the water to the appropriate location.


- 1. Check local regulations for specific directions regarding disposal of swimming pool water.
- 2. Check to make sure that the drain plug inside the pool is plugged in place.
- 3. Remove the cap from the drain valve on the outside pool wall.
- 4. Attach the female end of the garden hose to the drain connector (16).
- 5. Place the other end of the hose in an area where the water can be safely drained away from the house and other nearby structures.
- 6. Attach the drain connector to the drain valve. NOTE: The drain connector will push the drain plug open inside the pool and water will start to drain immediately.
- 7. When the water stops draining, start lifting the pool from the side opposite the drain, leading any remaining water to the drain and emptying the pool completely.
- 8. Disconnect hose and adapter when finished.
- **9**. Re-insert drain plug in drain valve on inside of pool for storage.
- 10. Replace drain cap on outside of pool.
- 11. Reverse the set-up instructions to disassemble the pool, and remove all connecting parts.
- 12. Be sure that the pool and all parts are completely dry before storage. Air dry the liner in the sun until completely dry before folding (see drawing 11). Sprinkle some talcum powder to prevent vinyl from sticking together and to absorb any residual moisture.
- 13. Create rectangular shape. Starting at one side, fold one-sixth of liner in on itself twice. Do the same on the opposite side (see drawings 12.1 & 12.2).
- 14. Once you have created two opposing folded sides, simply fold one over the other like closing a book (see drawings 13.1 & 13.2).
- 15. Fold the two long ends to the middle (see drawing 14).
- 16. Fold one over the other like closing a book and finally compact the liner (see drawing 15).
- 17. Store the liner and accessories in a dry, temperature controlled, between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius), storage location.
- 18. The original packing can be used for storage.

















WINTER PREPARATIONS

Winterizing your Above Ground Pool

After usage, you can easily empty and store away your pool in a safe place. You must drain, disassemble and properly store the pool when the temperature drops below 41 degrees Fahrenheit (5 degrees Celsius) to prevent ice damage to the pool and related components. Ice damage can result in sudden liner failure or pool collapse. Also see the section "How To Drain Your Pool".

Should temperatures in your area not drop below 41 degrees Fahrenheit (5 degrees Celsius), and you choose to leave your pool out, prepare it as follows:

- **1.** Clean the pool water thoroughly. If the type is an Easy Set Pool or an Oval Frame Pool, make sure that the top ring is properly inflated.
- **2.** Remove the skimmer (if applicable) or any accessories attached to the threaded strainer connector. Replace strainer grid if necessary. Be sure all accessories parts are clean and completely dry before storage.
- **3.** Plug the Inlet and Outlet fitting from the inside of the pool with the plug provided (sizes 16' and below). Close the Inlet and Outlet Plunger Valve (sizes 17' and above).
- **4.** Remove the ladder (if applicable) and store in a safe place. Be sure the ladder is completely dry before storage.
- **5.** Remove the hoses that connect the pump and filter to the pool.
- **6.** Add the appropriate chemicals for the winter period. Consult your local pool dealer as to which chemicals you should use and how to use them. This can vary greatly by region.
- 7. Cover pool with Intex Pool Cover. IMPORTANT NOTE: INTEX POOL COVER IS NOT A SAFETY COVER.
- **8.** Clean and drain the pump, filter housing and hoses. Remove and discard the old filter cartridge. Keep a spare cartridge for the next season.
- **9.** Bring pump and filter parts indoors and store in a safe and dry area, preferably between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius).

GENERAL AQUATIC SAFETY

Water recreation is both fun and therapeutic. However, it involves inherent risks of injury and death. To reduce your risk of injury, read and follow all product, package and package insert warnings and instructions. Remember, however, that product warnings, instructions and safety guidelines cover some common risks of water recreation, but do not cover all risks and dangers.

For additional safeguards, also familiarize yourself with the following general guidelines as well as guidelines provided by nationally recognized Safety Organizations:

- Demand constant supervision. A competent adult should be appointed as a "lifeguard" or water watcher, especially when children are in and around the pool.
- Learn to swim.
- · Take the time to learn CPR and first aid.
- Instruct anyone who is supervising pool users about potential pool hazards and about the use of protective devices such as locked doors, barriers, etc.
- Instruct all pool users, including children what to do in case of an emergency.
- Always use common sense and good judgement when enjoying any water activity.
- Supervise, supervise, supervise.

For additional information on safety, please visit

- The Association of Pool and Spa Professionals: The Sensible Way to Enjoy Your Aboveground/Onground Swimming Pool www.nspi.org
- American Academy of Pediatrics: Pool Safety for Children www.aap.org
- Red Cross www.redcross.org
- Safe Kids www.safekids.org
- Home Safety Council: Safety Guide www.homesafetycouncil.org
- Toy Industry Association: Toy Safety www.toy-tia.org

SAFETY IN YOUR POOL

Safe swimming depends on constant attention to the rules. The "NO DIVING" sign within this manual can be posted near your pool to help keep everyone alert to the danger. You may also wish to copy and laminate the sign for protection from the elements.

LIMITED WARRANTY

Your Intex Pool has been manufactured using the highest quality materials and workmanship. All Intex products have been inspected and found free of defects prior to leaving the factory. This Limited Warranty applies to the Intex Pool only.

The provisions of this Limited Warranty apply only to the original purchaser and is not transferable. This Limited Warranty is valid for a period of 90 days from the date of the initial retail purchase. Keep your original sales receipt with this manual, as proof of purchase will be required and must accompany warranty claims or the Limited Warranty is invalid.

If a manufacturing defect is found within this 90-day period, please contact the appropriate Intex Service Center listed in the separate "Authorized Service Centers" sheet. The Service Center will determine the validity of the claim. If the Service Center directs you to return the product, please carefully package the product and send with shipping and insurance prepaid to the Service Center. Upon receipt of the returned product, the Intex Service Center will inspect the item and determine the validity of the claim. If the provisions of this warranty cover the item, the item will be repaired or replaced at no charge.

Any and all disputes regarding the provisions of this Limited Warranty shall be brought before an informal dispute settlement board and unless and until the provisions of these paragraphs are carried forth, no civil action may be instituted. The methods and procedures of this settlement board shall be subject to the rules and regulations set forth by the Federal Trade Commission (F.T.C.). IMPLIED WARRANTIES ARE LIMITED TO THE TERMS OF THIS WARRANTY AND IN NO EVENT SHALL INTEX, THEIR AUTHORIZED AGENTS OR EMPLOYEES BE LIABLE TO THE BUYER OR ANY OTHER PARTY FOR DIRECT OR CONSEQUENTIAL DAMAGES OR LIABILITIES. Some states, or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty does not apply if the Intex product is subject to negligence, abnormal use or operation, accident, improper operation, improper maintenance or storage, or to damage by circumstances beyond Intex's control, including but not limited to, punctures, tears, abrasions, ordinary wear and tear and damage caused by exposure to fire, flood, freezing, rain, or other external environmental forces. This Limited Warranty applies only to those parts and components sold by Intex. The Limited Warranty does not cover unauthorized alterations, repairs or disassembly by anyone other than Intex Service Center personnel.

DO NOT GO BACK TO THE PLACE OF PURCHASE FOR RETURN OR REPLACEMENT. IF YOU ARE MISSING PARTS OR NEED ASSISTANCE, PLEASE CALL US TOLL-FREE (FOR U.S. AND CANADIAN RESIDENTS): 1-800-234-6839 OR VISIT OUR WEBSITE: WWW.INTEXSTORE.COM.

Proof of Purchase must accompany all returns or the warranty claim will be invalid.

119 PO

English

POST THIS WARNING NEAR YOUR POOL

O DIVING OR JUMPING SHALLOW WATE

DIVING MAY RESULT IN PERMANENT INJURY OR DEATH





Children must be accompanied by an adult. Be familiar with the pool before swimming. Don't swim when using alcohol or drugs.

Be Safe. Swim with a friend.

 No running, jumping, or horseplay in or around pool. No glass in pool area. TO AVOID SERIOUS INJURY ALL POOL USERS MUST KNOW AND FOLLOW THESE SAFETY RULES.